



PART	LOCATION	PART	LOCATION
54. LAVATORY DUMP CYLINDER	ENGINE COMPARTMENT	78. TRAILING WHEEL UNLOAD SYSTEM PRESSURE REGULATOR*	ENGINE COMPARTMENT
55. LAVATORY MANUAL VALVE*	ENGINE COMPARTMENT	79. ELEC/AIR SOLENOID VALVE	ENGINE COMPARTMENT
56. L.H. REAR SUSPENSION AIR FILTER	L.H. REAR WHEELSNG	80. REGULATOR, TRAILING WHEEL SUSPENSION	ENGINE COMPARTMENT
57. AIR TANK, DRY	ENGINE COMPARTMENT	81. CHECK VALVE BELLOWS	ENGINE COMPARTMENT
58. PARK BRAKE AIR TANK	ENGINE COMPARTMENT	82. R.H. BELLOWS CONTROL VALVE	ENGINE COMPARTMENT
59. PARK BRAKE PRESSURE REGULATOR	REAR WHEELSNG	83. L.H. BELLOWS CONTROL VALVE	ENGINE COMPARTMENT
60. PARK BRAKE QUICK RELEASE VALVE	REAR WHEELSNG	84. SAFETY VALVE, R.H. TRAILING WHEEL	ENGINE COMPARTMENT
61. PARK BRAKE CONTROL VALVE	INTERIOR, FRONT	85. BELLOWS, R.H. TRAILING WHEEL	REAR WHEELSNG
62. R-12 RELAY VALVE	REAR WHEELSNG	86. TRAILING WHEEL PRESSURE REGULATOR	TRAILING WHEELSNG
63. R.H. REAR SUSPENSION AIR FILTER	R.H. REAR WHEELSNG	87. R.H. TRAILING WHEEL BRAKE CHAMBER	REAR WHEELSNG
64. SAFETY VALVE	ENGINE COMPARTMENT	88. SAFETY VALVE, L.H. TRAILING WHEEL	ENGINE COMPARTMENT
65. SERVICE BRAKE STOPLIGHT SWITCH	ENGINE COMPARTMENT	89. L.H. TRAILING WHEEL PRESSURE REGULATOR	TRAILING WHEELSNG
66. AIR TANK, WET	ENGINE COMPARTMENT	90. L.H. TRAILING WHEEL BRAKE CHAMBER	REAR WHEELSNG
67. AIR DISCHARGE MUFFLER	ENGINE COMPARTMENT	91. BELLOWS, L.H. TRAILING WHEEL	REAR WHEELSNG
68. AIR DISCHARGE MUFFLER DRAIN VALVE	ENGINE COMPARTMENT	93. 4-WAY SOLENOID VALVE, DOOR AIR CYLINDER CONTROL**	UNDER R.H. DASH
69. AIR COMPRESSOR	ENGINE COMPARTMENT	94. 3-WAY SOLENOID VALVE DOOR STOP ACTUATING**	UNDER R.H. DASH
70. SHUTTLE VALVE	SPARE TIRE COMPARTMENT	95. DOOR LATCH AIR CYLINDER**	INTERIOR, FRONT
71. TWO-WAY CHECK VALVE	REAR WHEELSNG	96. DOOR MANUAL RELEASE VALVE	DASH
72. TYPE "E" FILTER	ENGINE COMPARTMENT	97. DOOR QUICK RELEASE VALVE	SPARE TIRE COMPT.
73. WINDSHIELD WASHER	L.H. FRT. SERVICE COMPT.	98. DOOR SOLENOID VALVE	SPARE TIRE COMPT.
74. WINDSHIELD WASHER VALVE	DASH	99. DOOR AIR CYLINDER**	UNDER R.H. DASH
75. WINDSHIELD WIPER CONTROLS	DASH	100. EMERG. BRAKE FAST IDLE SAFETY SWITCH	SPARE TIRE COMPT.
76. WINDSHIELD WIPER MOTOR, LEFT	EXTERIOR, FRONT	101. BRAKE VALVE	SPARE TIRE COMPT.
77. WINDSHIELD WIPER MOTOR, RIGHT	EXTERIOR, FRONT		

* OPTIONAL EQUIPMENT

** REFER TO ELECTRICAL AND AIR SCHEMATICS AND TO THE AIR DOOR CONTROLS INSTALLATION FIGURE IN SECTION 3 OF THIS MANUAL FOR THE AIR LINE CONNECTIONS.

THREE AXLE COACH AIR LINE DIAGRAM
PLUS ENGINE VARIATIONS - 2/1/91