
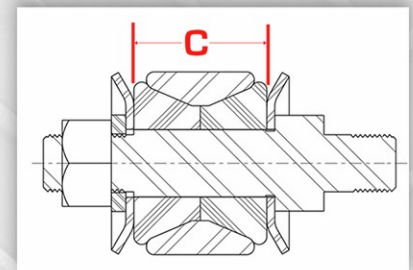


#11172016

Shock Absorber Installation Guide Common EB Type Mounts

Installation procedure:

1. Washers and bushings should be replaced in the order shown below:

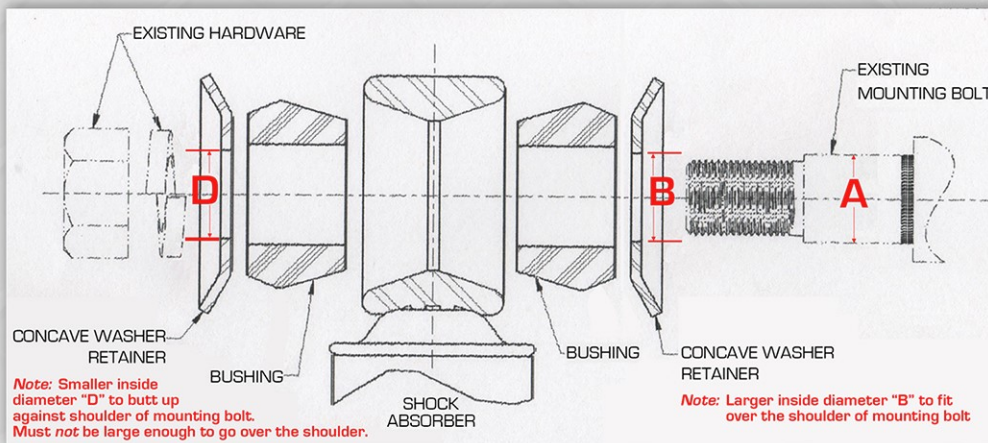

Mount Code	A	B	C	D
EB1	0.625	0.630	1.31	0.457
EB2	0.75	0.76	1.50	0.52
EB3	1.00	1.01	1.75	0.781

2. Be sure to note the orientation of the washers and the size of inside diameter (D).



If over compressed, the bushings will restrict the movement of the shock absorber with the articulation of the suspension and put excessive side-loading on it. This restricted movement (side loading) will cause premature rod seal failure, resulting in oil leakage or metal fatigue to the shock absorber end mount.

